



•

--	--	--	--	--	--

 -

--	--	--	--	--

 &FAPPLE

--	--	--



&FAPPLE

1.ARSPD_TYPE = 1

2.ARSPD_OPTIONS = 15 (DisableVoltageCorrection)

3.ARSPD_AUTOCAL = 1

4.ARSPD_SKIP_CAL = 1

, ARSPD_OFFSET 0,
0 Fapple
ARSPD_SKIP_CAL 1
ARSPD_SKIP_CAL

RTL Loiter 5 (2
ARSPD_RATIO) OSD

(ARSPD_AUTOCAL
= 0 ARSPD_RATIO
ARSPD_RATIO=2.0,

ARSPD_USE=1 2
ARSPD_USE 2 0
ARSPD_USE (AUTO,CRUISE,FBWB,RTL)

: ,
.

AIRSPEED_CRUISE: (: / M/s) (Ardupilot4.5
TRIM_ARSPD_CM, /s)

AIRSPEED_MIN: () 20% (: / M/s)(Ardupilot4.5 ARSPD_FWB_MIN)

AIRSPEED_MAX: () ARSPD_FWB_MIN 50%
(: / M/s)(Ardupilot4.5 ARSPD_FWB_MAX)